
Installation/Care/Use Manual

Soft Sides[™] Fountains with FLEXI-GUARD[®]

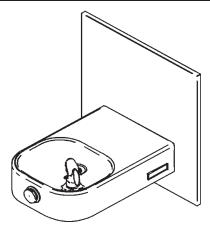

ECDFPW314C

Installer


To assure you install this model easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL AND OTHER APPLICABLE CODES. After installation, leave these instructions inside the fountain for future reference.

IMPORTANT

ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON

IMPORTANT! INSTALLER PLEASE NOTE.

THE GROUNDING OF ELECTRICAL EQUIPMENT SUCH AS TELEPHONE. COMPUTERS, ETC. TO WATER LINES IS A COMMON PROCEDURE. THIS GROUNDING MAY BE IN THE BUILDING OR MAY OCCUR AWAY FROM THE BUILDING. THIS GROUNDING CAN CAUSE ELECTRICAL FEEDBACK INTO A FOUNTAIN. CREATING AN ELECTROLYSIS WHICH CAUSES A METALLIC TASTE OR AN INCREASE IN THE METAL CONTENT OF THE WATER. THIS CONDITION IS AVOIDABLE BY USING THE PROPER MATERIALS AS INDICATED. ANY DRAIN FITTINGS PROVIDED BY THE INSTALLER SHOULD BE MADE OF PLASTIC TO ELECTRICALLY ISOLATE THE FOUNTAIN FROM THE BUILDING PLUMBING SYSTEM.

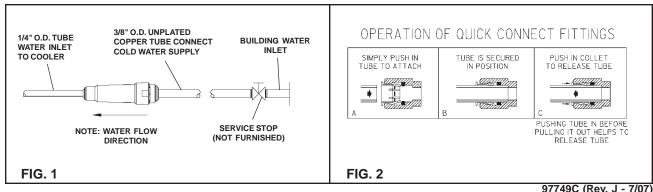

97749C (Rev. J - 7/07)

ECDFPW314C 16" 406mm 1/4" (6mm) DIA HOLES FOR 8' 8" MOUNTING PLATE TO WALL 203mm 203mm BACK PANEL 5 1/4" 133mm 3/8" (10mm) DIA HOLES 5 1/4" FOR MOUNTING PLATE 133mm WALL PLATE -TO WALL (10) **ASSEMBLY** В 1/2" 13mm 6" 152mm 39 9/16" 1005mm 26 7/16" 8' 672mm 203mm 23 1/16" 25 3/16" 586mm 640mm 10 3/8" 203mm 264mm 19 3/4" 18 3/4" 5/8" 502mm 476mm 16mm 12 1/8" 308mm 457mm 1 5/8" 42mm -3 3/16" 20 3/8" 518mm 810mm 4 3/8" 0 111mm 229mm В 24" 610mm 17 1/2" 445mm - 9" -12 1/2" 9 7/8" 229mm 318mm 251mm FINISHED FLOOR

FIG. 3

LEGEND

- A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUBBED 1-1/2" (38mm) FROM WALL SHUT OFF BY OTHERS
- B = RECOMMENDED LOCATION FOR WASTE OUTLET 1-1/4" O.D. DRAIN
- C = 1-1/4" DRAIN FURNISHED
- D = OPENING FOR OPTIONAL AP-99 ACCESS PANEL.

NOTE: REINFORCE THE WALL IN THE SHADED AREAS

INSTALLATION INSTRUCTIONS

- 1. Wall should already be framed for the fountain using the positioning dimensions shown in Figure 3. Shown dimensions pertain to installation location (framing must support up to 300 lbs. weight). These dimensions are required for compliance with ANSI Standard A117.0.
- 2. Attach wall plate assembly to wall as shown in Figure 3 using 5/16" x 2" long bolts and flat washers (not provided). Tighten securely. (Fastener must match wall type, i.e. lag screws for wood studs, bolts and anchors for masonary construction.)
- **3. Install back panel.** Place the upper edge of the panel above hanger on the wall. Slide panel down until it engages the hanger. Be sure back panel is firmly engaged before releasing it.
- **4. Install rough-in plumbing** as shown in Figure 3. Waste line should extend a minimum of 2" (51mm) thru the back panel. Run supply water inlet line thru back panel. Install a service stop (not provided). Turn on supply water and flush thoroughly.
- **5.** Remove bottom access panel from fountain basin and save the screws. Install the fountain to the back panel using (4) 5/16" x 3/4" long screws and washers (provided) thru holes in back panel. Tighten securely.
- **6. Cut waste tube** to required length using plumbing hardware and a trap (not provided) as a guide. Install hardware and trap. Tighten securely.
- 7. Make water supply connections from service stop to the 3/8" O.D. unplated copper tube coming out of the fountain strainer (See Fig. 1). Turn on water supply and check for leaks. Newly installed water supply line should be insulated after leak check is completed. DO NOT SOLDER TUBES INSERTED INTO THE STRAINER AS DAMAGE TO THE O-RINGS MAY RESULT.
- 8. These products are designed to operate on 20-105 PSIG supply line pressure. If inlet pressure is above 105 PSIG, a pressure regulator must be installed in the supply line. Any damage caused by reason of connecting these products to supply line pressure lower than 20 PSIG or higher than 105 PSIG is not covered by warranty.
- 9. Check stream height from bubbler. Stream height is factory set at 35 PSI. If supply pressure varies greatly from this, adjust the screw on regulator item 10 by using a small screwdriver through the small hole in the push button item 3 (See Fig.5). Clockwise adjustment will raise stream height and counter-clockwise adjustment will lower stream height. For best adjustment stream should hit basin approximately 6-1/2" (165mm) from bubbler.
- 10. Replace bottom access panel to fountain basin using screws provided. Tighten securely.

TROUBLE SHOOTING AND MAINTENANCE

- 1. **Orifice Assy:** Mineral deposits on orifice can cause water flow to spurt or not regulate. Mineral deposits may be removed from orifice with a small round file not over 1/8" diameter or a small diameter wire. **CAUTION:** Do not file or cut orifice materials.
- 2. Stream Regulator: If orifice is free of material deposits, regulate flow according to instruction 9 stated above.
- 3. Actuation of Quick Connect Water Fittings: Cooler is provided with lead-free connectors which utilize an o-ring water seal. To remove tubing from the fitting, relieve water pressure, push in on the gray collar while pulling on the tubing (See Figure 2). To insert tubing, push tube straight into the fitting until it reaches a positive stop, approximately 3/4".

ECDFPW314C ECDFPWVR314C

	PARTS LIST		
ITEMNO. P	PARTNO.	DESCRIPTION	
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29	40575C 15005C 45662C 45662C 45737C 50986C 40322C 55011C 55997C 75580C 61313C 75672C 2827543890 55996C 28790C 55000665 28291C 00045C 28291C 0015090C 45392C 45392C 456092C 28286C 45679C 45805C 50074C 60295C 45736C 75541C	Drain - Strainer Retaining Nut Push Button Push Button Sleeve Regulator Holder Orifice Assy Housing Assy Pedestal Bubbler Locknut Regulator Cap Screw Screw - #10-24 X .50 PHTC Strainer Fountain Arm - Long Bottom Cover Plate - Long Back Panel Hex Nut Regulator Mounting Bracket Gasket (VR Model Only) Bubbler - Nipple (VR Model Only) Bubbler (VR Model Only) Poly Tubing (Cut To Length) Mounting Plate Assy Drain Tailpipe Drain Adapter Gasket - Tail Pipe Tube - Water In Nut-Regulator Mounting Washer - Flat .339/.359ID Steel Screw - Mach. 5/16-18 x 3/4	

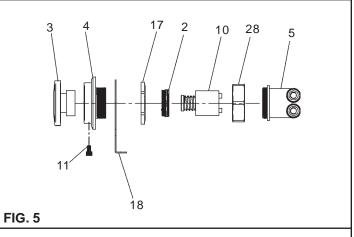


FIG. 6 FIG. 7


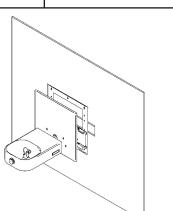


FIG. 5

27

15

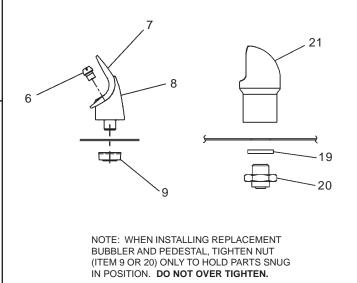

SEE FIG. 6 OR 7

14

29, 30

23

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.323.0620 ELKAY MANUFACTURING COMPANY • 2222 CAMDEN COURT • OAK BROOK, IL 60523 • 630.574.8484

1,24,25,26